



**Important advice about how to safely charge your
Motocaddy battery and prolong battery life**

Charging Advice:

1. The Battery must be charged on a dry non-carpeted, non-flammable hard surface. The ambient temperature should be between 10 and 30 degrees Celsius. Charging outside this temperature range can cause reduced battery capacity or overcharging.
2. Do not charge your battery inside your house as gases produced during charging could be harmful to your health. Always charge in a well ventilated area.
3. Do not leave your battery on charge and unsupervised for more than 24 hours and where possible check it from time to time. If within 12 hours the indicator light does not show green (fully charged) your battery may be faulty or not accepting charge. Please disconnect the charger from the battery and contact Motocaddy or your supplier to discuss this issue before re-charging.
4. Always charge your battery within a few hours of playing golf. This will reduce the chances of oxidisation on the battery plates and will extend your battery life.
5. If you have an extended range battery please ensure that all holes are played in one day. The battery is not designed to be used over consecutive days without recharging as oxidisation can occur overnight. Where possible re-charge between rounds.
6. Never attempt to deeply discharge your battery. Your Motocaddy trolley has a built-in low voltage protection system designed to ensure this never happens and will cut-out before damaging the battery. If your trolley repeatedly cuts-out then your battery may need replacing, please contact Motocaddy or your supplier.
7. If the battery is not used for prolonged periods of time, please charge your battery at regular intervals. Please do not leave it on charge or connected to the charger.

Operating Instructions:


Please ensure that only batteries supplied by Motocaddy are charged with this equipment. Cyclic battery chargers are designed and specified in accordance with the battery manufacturers requirements. The charger should only be connected to an earthed socket outlet and charging should only take place on a dry non-carpeted, non-flammable hard surface. Please ensure that the battery, charger and cables are in good condition and the terminals are securely connected.

1. Always disconnect and remove the battery from the trolley whilst charging.
2. Plug the charger into a power socket and attach the battery cable to the charger, matching the red and black connections.
3. The red power indicator will illuminate to indicate that the charger is connected to a power supply. If the light does not turn red, there may be a problem with your charger or power supply. If you suspect that the charger is not working, please contact Motocaddy before attempting re-charging again. .
4. The green LED charging lights will illuminate in sequence during the charging cycle. If they fail to do so then your battery may not be reaching full capacity and will need further investigation. If this appears to be the case, please do not continually charge your battery in this state as this could damage both the battery and the charger.
5. Once charging is complete please disconnect the charger from the mains power supply and the battery. Never leave the charger connected whilst not on charge.

NB : Never charge the battery outside or in conditions that may allow moisture to penetrate the charger or connections. If the battery is not used for prolonged periods of time, please charge your battery at regular intervals. Please do not leave it on charge or connected to the charger. The battery should be charged for at least 8 hours before using it for the first time.

LED Indicator:

The charging indicator will accurately show the charged capacity of the battery during the charging phase. The red LED illuminates when the charger is connected to a power supply and each of the five green LED lights will illuminate in turn as soon as the next charging stage is reached.

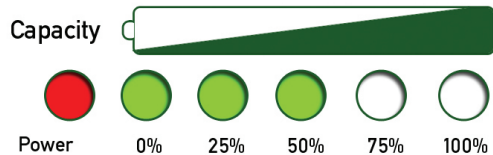

When the battery reaches the fully charged state, each of the green LED lights will flash to show that it is ready to be disconnected. The charger will enter the trickle charge mode at this stage and it is recommended you unplug your battery and disconnect your charger rather than leave it connected continuously when fully charged.